

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energieeffektivitātes

Table with columns for PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include product details for FABER P1606 (S, M), energy efficiency metrics (AEEhood, EEC, FDEhood, FDEC, LEhood, LEC, GFEhood, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, F, EELhood, Qbep, Pbep, Qmax, Wbep, WL, Emiddle, Lwa), and technical specifications (PI, F, EELhood, Qbep, Pbep, Qmax, Wbep, WL, Emiddle, Lwa). Includes multilingual instructions for use, safety, and maintenance.

