

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energoefektivitātes

Table with 16 columns: PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include model details (S FABER M 110.0456.220 P1207), performance metrics (AEEhood 57.8 kWh/a, FEEC A, FDEhood 29.9, FDEC A, LEhood 133 lux/Watt, LEC A, GFEhood 85.1 %, GFEC B, Qmin 280 m3/h, Qmax 580 m3/h, Qboost 680 m3/h, SPEmin 56 dbA, SPEmax 68 dbA, SPEboost 71 dbA, P0 0.49 Watt, Ps N/A, PI 0.9, EElhood 53.5, Qbep 402.0 m3/h, Pbep 435 Pa, Qmax 680.0 m3/h, Wbep 162.5 W, WL 6.0 W, Emiddle 800, Lwa 68), technical specifications (F, F, F, WL, Emiddle, Lwa), safety instructions (CONSIGLI PER IL RISPARMIO ENERGETICO), and a glossary of terms (CONSIGLI PARA EL AHORRO DE ENERGIA, CONSEJOS PARA EL AHORRO DE ENERGIA, etc.).

