

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual – Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energieeffektivitātes

Table with 15 columns: PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include manufacturer info (S FABER), energy efficiency classes (AEchood, EEC, FDEhood, FDEC, LEhood, LEC, GFEhood, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, F, EELhood, Qbep, Pbp, Qmax, Wbep, WL, Emiddle, Lwa), and technical specifications (PI, F, EELhood, Qbep, Pbp, Qmax, Wbep, WL, Emiddle, Lwa). Includes sections for safety instructions (CONSIGLI PER IL RISPARMIO ENERGETICO) and maintenance (CONSIGLI PER LA MANUTENZIONE).

