

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual – Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energieeffektivitates

Table with 13 columns: PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. It lists various energy efficiency parameters such as AEC, EEC, FDE, FDEC, LE, LEC, GFE, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, F, EEL, Qbep, P, Qbep, WL, Eemiddle, Lwa, and CONSIGLI PER IL RISPARMIO ENERGIAICO. Each parameter includes values for different models and detailed descriptions in multiple languages.

