

Manuale d'uso - Effizienz Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energoefektivitātes

Table with columns PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include product info (S FABER M 330.0529.664 P2315), efficiency classes (AEchood, EEC, FDEhood, FDEC, LEhood, LEC, GFEhood, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, F, EElhood, Qbep, Pbp, Qmax, Wbep, WL, Emiddle, Lwa), and technical specifications (PI, F, EElhood, Qbep, Pbp, Qmax, Wbep, WL, Emiddle, Lwa). The table is organized into sections for product identification, efficiency metrics, and detailed technical data.

